


Uruchomienie obrazu na GXV32xx z Bramą SIEDLE Smart Gateway SG 650-0

Ustawienia normalne znajdzie państwo w dokumencie dla komunikacji IP [GXV32xx – konfiguracja do pracy z domofonem](#), poniższy dokument jest rozszerzeniem dla SG650 który pomoże uzyskać obraz z kamery domofonu.


Strona ustawień SG650

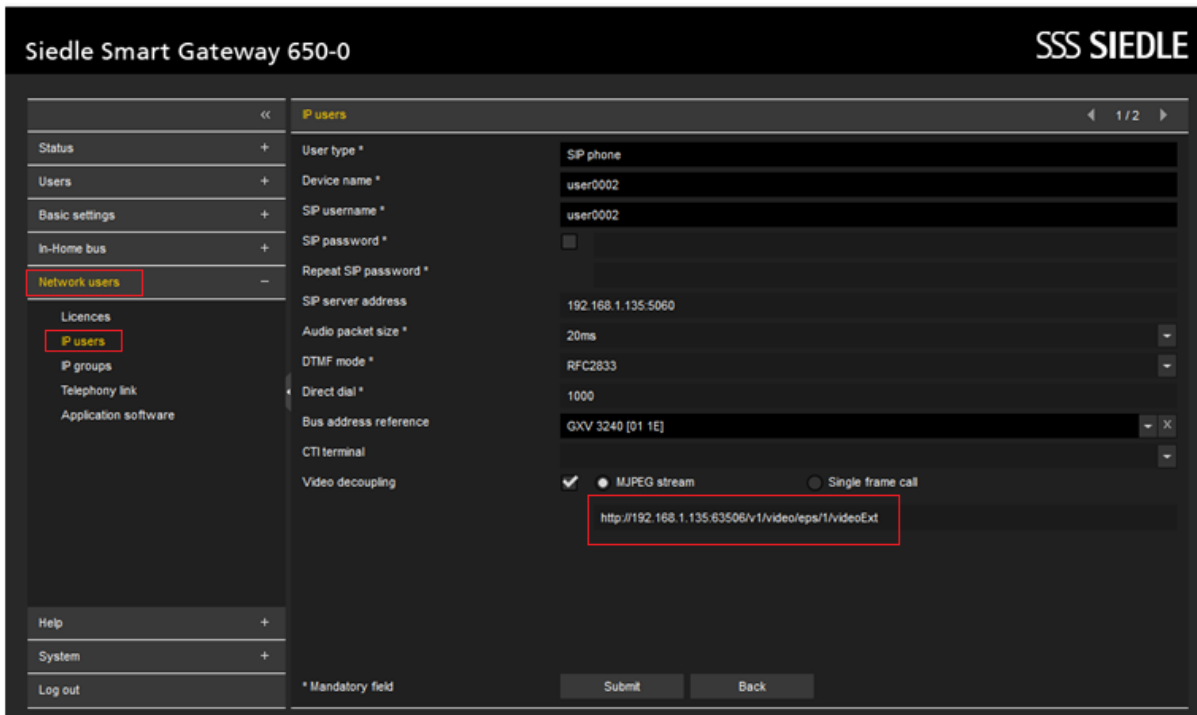

The screenshot shows the configuration page for an IP user on the Siedle Smart Gateway 650-0. The interface is in a dark theme. On the left, a navigation menu includes 'Network users' (highlighted in red), 'Licences', 'IP users' (highlighted in red), 'IP groups', 'Telephony link', and 'Application software'. The main area is titled 'IP users' and shows configuration for 'user0002'. The 'Video decoupling' section is expanded, showing 'MJPEG stream' selected and a URL field containing 'http://192.168.1.135:63506/v1/video/eps/1/videoExt', which is also highlighted in red. Other fields include 'SIP phone', 'Device name', 'SIP username', 'SIP password', 'SIP server address', 'Audio packet size', 'DTMF mode', 'Direct dial', 'Bus address reference', and 'CTI terminal'. Buttons for 'Submit' and 'Back' are at the bottom.

Strona ustawienia GXV32xx

Wybierz Baudish Door System z Account X -> call settings

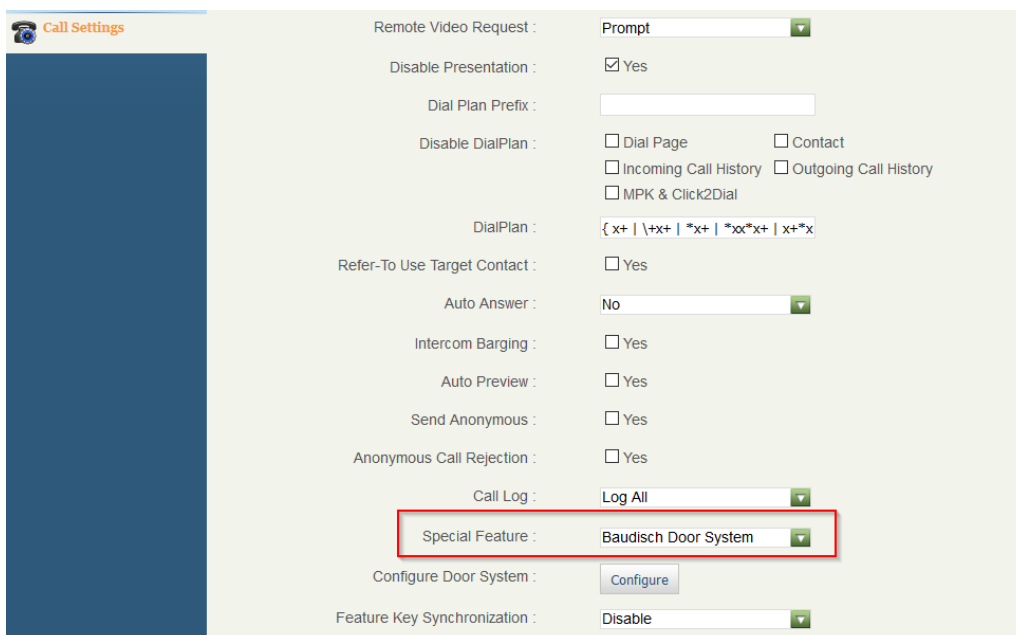

The screenshot shows the 'Call Settings' page for a GXV32xx device. The page has a light green background and a blue sidebar on the left. The 'Special Feature' dropdown menu is highlighted in red and set to 'Baudish Door System'. Other settings include 'Remote Video Request' (Prompt), 'Disable Presentation' (Yes), 'Dial Plan Prefix' (empty), 'Disable DialPlan' (Dial Page, Contact, Incoming Call History, Outgoing Call History, MPK & Click2Dial), 'DialPlan' (regular expression), 'Refer-To Use Target Contact' (No), 'Auto Answer' (No), 'Intercom Barging' (No), 'Auto Preview' (No), 'Send Anonymous' (No), 'Anonymous Call Rejection' (No), 'Call Log' (Log All), 'Configure Door System' (Configure button), and 'Feature Key Synchronization' (Disable).

Wybierz ustawienie „Configure” dla Baudisch Door System

„Link z SG650” -> link zaznaczony na 1 obrazku, należy go przekopiować w to pole.

Numer SG650 -> numer domofonu nie naszej końcówki (np. 1019)

The screenshot shows a web-based configuration interface. On the left is a sidebar with menu items: General Settings, Network Settings, SIP Settings, Codec Settings, and Call Settings. The top navigation bar includes Status, Account, Advanced Settings, and Maintenance. Under the 'Account' tab, there are sub-tabs for Account 1 through Account 6. The main area shows a 'Start Video Automatically' checkbox checked to 'Yes'. A modal dialog box is open, titled 'Door System URL' and 'Door System SIP User ID'. It contains a list of 17 rows. The first row has 'Link z SG650' in the URL field and 'NUMER SG650' in the SIP User ID field. Both fields in the first row are highlighted with red boxes. The remaining rows are empty. An 'OK' button is located at the bottom right of the dialog.

	Door System URL	Door System SIP User ID
1 :	Link z SG650	NUMER SG650
2 :		
3 :		
4 :		
5 :		
6 :		
7 :		
8 :		
9 :		
10 :		
11 :		
12 :		
13 :		
14 :		
15 :		
16 :		
17 :		

Od tego momentu wraz z dźwiękiem pojawi nam się obraz.