


Uruchomienie obrazu na GXV32xx z Bramą SIEDLE Smart Gateway SG 650-0

Ustawienia normalne znajdzie państwo w dokumencie dla komunikacji IP [GXV32xx – konfiguracja do pracy z domofonem](#), poniższy dokument jest rozszerzeniem dla SG650 który pomoże uzyskać obraz z kamery domofonu.


Strona ustawień SG650

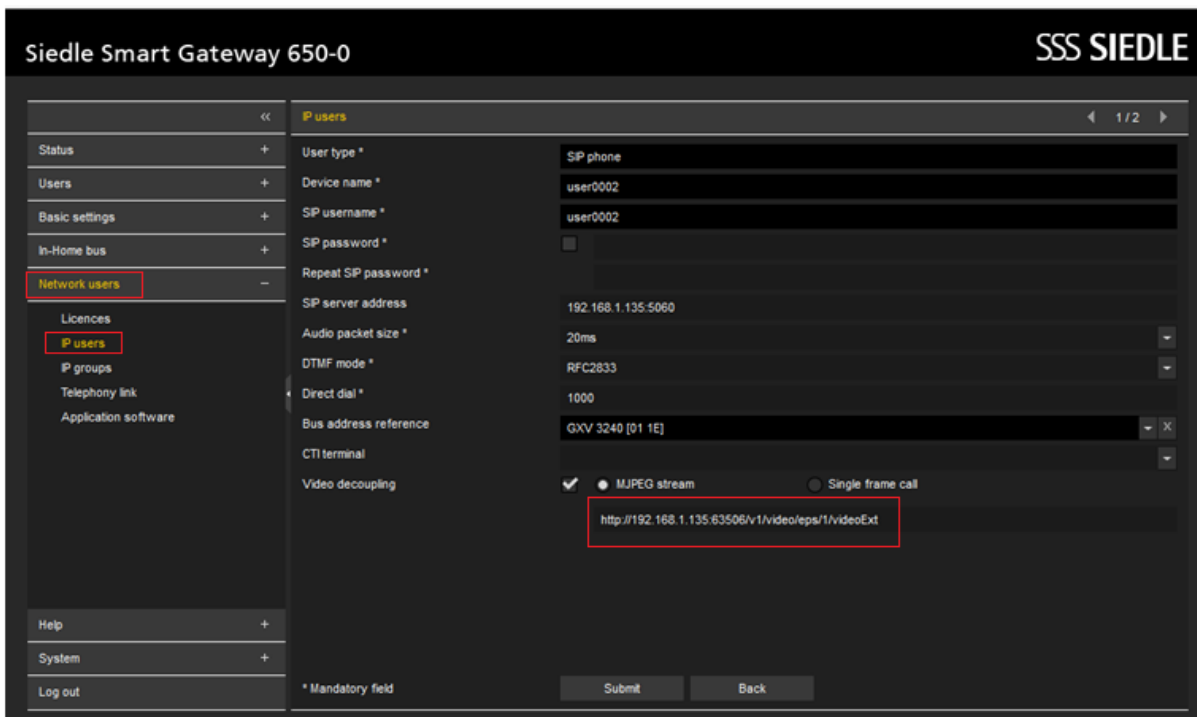

The screenshot shows the configuration page for an IP user on the Siedle Smart Gateway 650-0. The interface is in a dark theme. On the left, a navigation menu includes 'Network users' (highlighted in red), 'Licences', 'IP users' (highlighted in red), 'IP groups', 'Telephony link', and 'Application software'. The main area is titled 'IP users' and shows configuration for 'user0002'. The 'Video decoupling' section is expanded, showing 'MJPEG stream' selected and a URL field containing 'http://192.168.1.135:63506/v1/video/eps/1/videoExt' (highlighted in red). Other fields include 'SIP phone', 'Device name', 'SIP username', 'SIP password', 'SIP server address', 'Audio packet size', 'DTMF mode', 'Direct dial', 'Bus address reference', and 'CTI terminal'. Buttons for 'Submit' and 'Back' are at the bottom.

Strona ustawienia GXV32xx

Wybierz Baudish Door System z Account X -> call settings

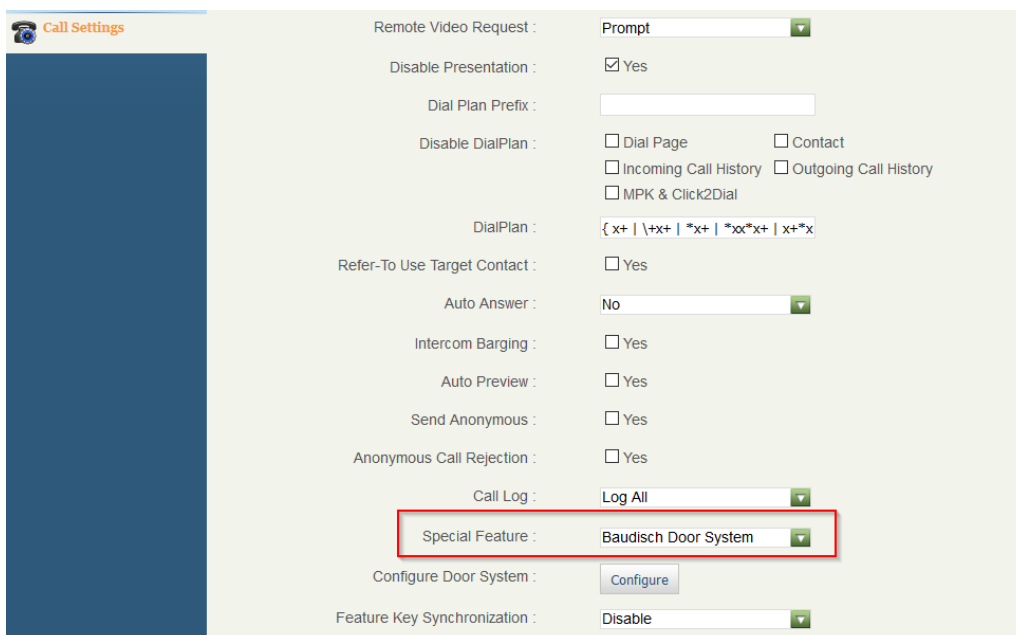

The screenshot shows the 'Call Settings' page for a GXV32xx device. The page has a light green background. The 'Special Feature' dropdown menu is highlighted in red and set to 'Baudish Door System'. Other settings include 'Remote Video Request' (Prompt), 'Disable Presentation' (Yes), 'Dial Plan Prefix' (empty), 'Disable DialPlan' (Dial Page, Contact, Incoming Call History, Outgoing Call History, MPK & Click2Dial), 'DialPlan' (regular expression), 'Refer-To Use Target Contact' (No), 'Auto Answer' (No), 'Intercom Barging' (No), 'Auto Preview' (No), 'Send Anonymous' (No), 'Anonymous Call Rejection' (No), 'Call Log' (Log All), 'Configure Door System' (Configure button), and 'Feature Key Synchronization' (Disable).

Wybierz ustawienie „Configure” dla Baudisch Door System

„Link z SG650” -> link zaznaczony na 1 obrazku, należy go przekopiować w to pole.

Numer SG650 -> numer domofonu nie naszej końcówki (np. 1019)

The screenshot shows a software configuration window for a Baudisch Door System. The window has a sidebar on the left with the following menu items: General Settings, Network Settings, SIP Settings, Codec Settings, and Call Settings. The main area is titled 'Account' and contains a 'Start Video Automatically' checkbox (checked) and a table for configuring door systems. The table has two columns: 'Door System URL' and 'Door System SIP User ID'. The first row is filled with 'Link z SG650' and 'NUMER SG650', both highlighted with red boxes. An 'OK' button is at the bottom right of the table.

	Door System URL	Door System SIP User ID
1 :	Link z SG650	NUMER SG650
2 :		
3 :		
4 :		
5 :		
6 :		
7 :		
8 :		
9 :		
10 :		
11 :		
12 :		
13 :		
14 :		
15 :		
16 :		
17 :		

Od tego momentu wraz z dźwiękiem pojawi nam się obraz.